


ADVANCED *Intellitherm C55* FUNCTIONS


MONITORING HOW MANY HOURS THE HEATING STAYS ON

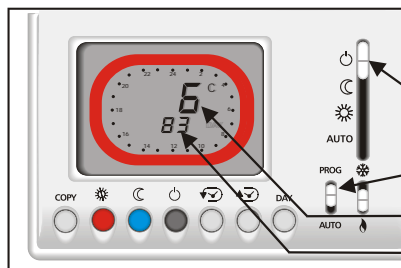

With Intellitherm C55, you can keep a check on how many hours the heating has actually been on (relay closed - ON) on the previous day or since the temperature controller was last enabled (i.e. since the last time the batteries were changed or the device was reset).

- 1 Move the switch **S** to the position
- 2 Move the switch **P** to the **PROG** position
- 3 Read the hours of heating on the previous day
- 4 Read the hours of heating since the controller was enabled.


MINIMUM AND MAXIMUM ROOM TEMPERATURE ON THE PREVIOUS DAY

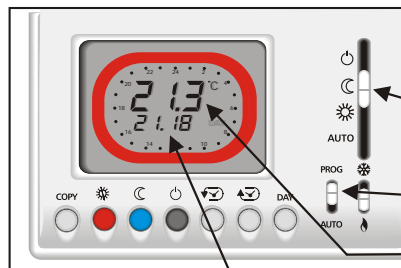

With Intellitherm C55 you can also keep a check on the minimum and maximum temperatures recorded in the room on the previous day and the time when they occurred.

- 1 Move the switch **S** to the (economy) position for the MINIMUM temperature or to the (comfort) position for the MAXIMUM temperature
- 2 Move the switch **P** to the **PROG** position
- 3 Read the minimum or maximum room temperature
- 4 Read the time when said minimum or maximum temperature was recorded

SUMMER - AIR CONDITIONING OPERATION

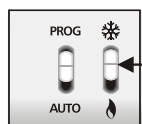

When you move the switch **S** to the SUMMER position, Intellitherm C55 switches to operating the AIR CONDITIONING system. The red knob is used for adjusting the comfort mode temperature required in the room, while the economy and antifreeze modes are disabled. The red sectors on the ring appearing on the display consequently indicate the hours when the air-conditioning system is in operation, while the sectors in any other color indicate when it is off.

TELEPHONE ACTIVATOR

Intellitherm C55 has been designed for combining with the **CT5 telephone activator**. This accessory enables remote control of the temperature controller by means of a normal telephone line. The CT5 telephone activator is equipped with a voice synthesizer that enables its immediate and straightforward use. It also enables remote monitoring of the room temperature and of the proper operation of the temperature controller.

TECHNICAL FEATURES

- In compliance with the CEI EN 60730-1 and parts two
- Terminal carrying capacity 8 (5) A 250 Vac
- Micro-disconnection (1BU)
- No-load switching contact
- Temperature control:
- Comfort from 2 to 62 °C
- Economy from 2 to 62 °C
- Differential ± 0.25 °C
- Reference thermal gradient 4° K/h
- OFF mode with optional antifreeze protection (5 °C)
- Selected by means of a dip switch
- double insulation
- Protection grade IP 20 (normal pollution)
- Powered by 2 alkaline AA 1.5V pencil batteries, with no connection to the mains
- Battery life two years approx.
- Automatic monitoring of battery charge with signal on display when battery is low
- Battery changing without losing previously-memorized programs
- Switch for summer/winter operating modes
- Reset button for restoring standard program
- Overall dimensions: 120 x 80 x 27 mm

We reserve the right to make any technical and structural changes deemed necessary without prior notice.



Via dell'Osio, 6 20090 Calepio di Settala MI - ITALY
International calls Tel. ++39 02 95682222
Fax +39 02 95307006
E-mail: export@fantinicosmi.it http://www.fantinicosmi.com

Intellitherm Techno W - C55

WEEKLY TEMPERATURE CONTROLLER



1 - WALL MOUNTING

Intellitherm C55 is supplied complete with a base suitable for mounting flush in a rectangular three-module or a round outlet box, or for attaching to the wall.

Fit the controller **1.5 m** above floor level, well away from kitchens, sources of heat, doors or windows. Make sure that the base is attached on a level and without any straining.

2 - ELECTRIC CONNECTIONS

Connect terminals **1 - 2** to the heating system with two wires, replacing the conventional thermostat at any time, without adding any further connections. When the room temperature increases, the relay opens terminals **1 - 2** and closes **1 - 4**. Terminal **4** is free and can be used for signals or other purposes.

3 - SELECTING THE OFF MODE

During periods when it is **OFF**, Intellitherm can be set to maintain a temperature setting of 5 °C to protect the system from the risk of freezing.

If you require such **ANTIFREEZE** protection, position the dip switch (situated at the bottom left-hand side on the back of the body of the C55) on **HIGH**. If, on the other hand, you want the system to be switched **OFF** completely, position the dip switch on **LOW**.

This selection must be made at the time of installation **and before fitting the batteries**.


NOTE: if, at any time after installation, you wish to change this selection, the Intellitherm must be reset and reprogrammed.

4 - FITTING THE BODY OF THE TEMPERATURE CONTROLLER ON THE BASE


5 - FITTING THE BATTERIES

Insert two good-quality, alkaline long-life **AA 1.5 V** pencil batteries in the space provided, taking care to comply with the polarity indicated. The batteries can last about two years; when they begin to run down, the battery symbol on the display starts to flash . If the batteries are not changed within 15 days, Intellitherm C55 will automatically switch off and only the word **OFF** will appear on the display.


DISTANCE BETWEEN CENTERS FOR FIXING THE BASE

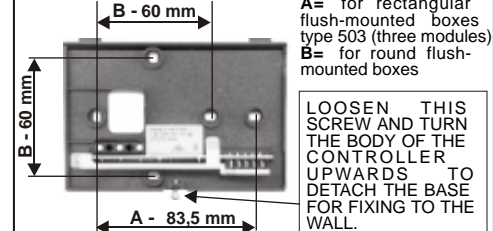

TERMINAL BOARD AND CONNECTIONS

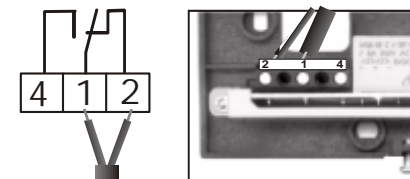


SELECTING THE OFF OR OFF+ANTIFREEZE PROTECTION MODES

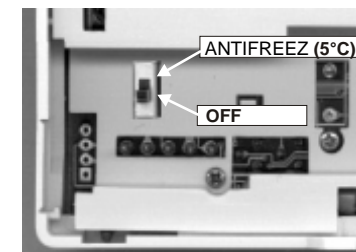


FITTING AND CHANGING THE BATTERIES

Lift the cover and fit two 1.5V batteries

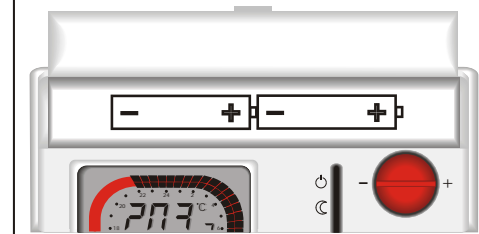

THE DISPLAY *Intellitherm C55*

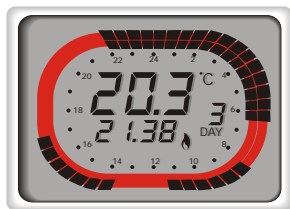

At all times, the display shows the room temperature, the actual time of day and day of week, whether there is any demand for heating (or for conditioning ❄️ in summer) and the battery low signal . The display also shows a programming ring that represents a 24-hour clock, divided into 48 sectors, each corresponding to half an hour. Each sector is further divided in half and colored red, red-and-black, or black (depending on the program selected). The color of the sectors indicates the type of temperature programmed for that particular time of day, i.e.



- red = comfort temperature
- half red and half black = economy temperature
- black = off.

USING INTELLITHERM C55 WITH THE STANDARD PROGRAMS

i.e. with the default schedules and temperatures already programmed at the factory

After installing and wiring up the C55, simply follow the numbered steps specified below.

- 1** Move the switch **S** to the **AUTO** position for operation with the **automatic standard weekly** program with the default schedules and temperatures already programmed at the factory.

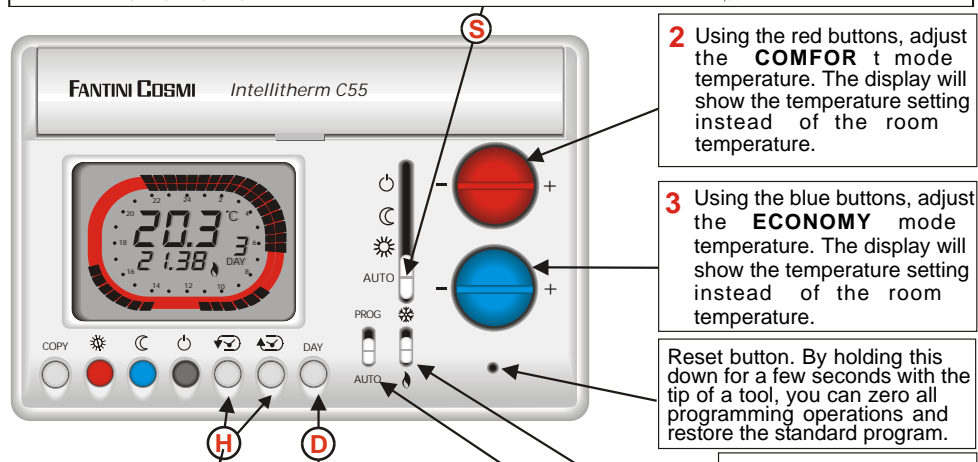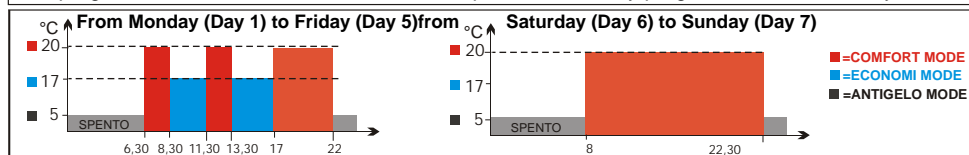

SETTING THE ACTUAL TIME AND DAY OF THE WEEK

These steps can also be taken before all the others.


- 6** Adjust the actual time using the buttons **H**
- 7** Select the actual day of the week using the button **D** (1 = Monday - 2 = Tuesday - 3 = Wednesday - 4 = Thursday - 5 = Friday - 6 = Saturday - 7 = Sunday).

THE OTHER *Intellitherm C55* PROGRAMS

OFF - this keeps the system constantly off or with the antifreeze protection option enabled, depending on the choice made at the time of installation (see previous page).

ALWAYS ECONOMY - this constantly maintains the economy mode temperature selected by means of the blue buttons.

ALWAYS COMFORT - this constantly maintains the comfort mode temperature selected by means of the red buttons.

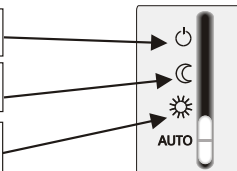

CUSTOMIZING THE *Intellitherm C55* (PROGRAMMING)

Programming the Intellitherm C55 is extremely straightforward. All you have to do is change the color of the sectors on the ring that coincide with the schedules you require, i.e.


- red for the hours when you want the comfort mode temperature
- red and black for the hours when you want the economy mode temperature
- black for the hours when you want the system switched off.

To change the color of the sectors, simply follow the numbered steps below.

- 2** Place the switch **P** high, on the **PROG (programming)** position. The display will indicate **00.00** hours and day **1**. The flashing cursor on the ring will automatically come into position on the first sector after the 24 hours.

- 3** Move the flashing cursor (forwards or backwards) around the Ring with the aid of the keys. The sector whose color you want to change will flash on the ring and the corresponding time will appear on the display.

- 4** Press the buttons to color the sectors On the ring. Each time you press one of the three buttons, the sector becomes colored and the cursor moves forward by half an hour; use:
 - the red buttons for a red sector
 - the blue buttons for a half red and half black sector
 - the black buttons for a black sector.
 To move the cursor without changing the color of a sector, use the buttons.

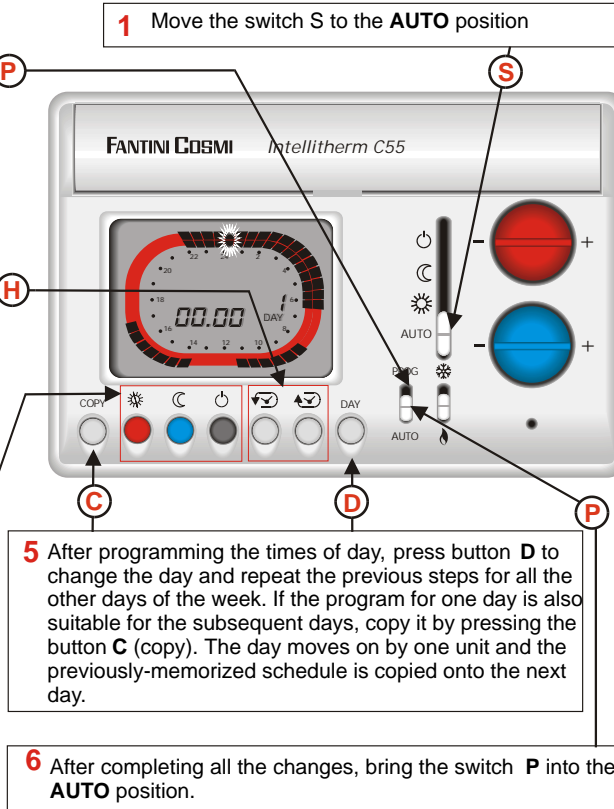

WILD CARD FUNCTION

With Intellitherm C55, you can temporarily cut out the automatic program at any time, without losing it, in order to obtain a given temperature (comfort, economy, off) continuously for an interval ranging from **1 to 240** hours.

- 1** Put the switch **S** on the **AUTO** position
- 2** Put the switch **P** on the **AUTO** position
- 3** Press the **red or blue or black** buttons to establish the number of hours (shown on the display) during which time you want to cut out the automatic program and temporarily "force" the **comfort or economy or off mode**. The ring on the display will turn the color corresponding to the temperature you have selected.

